


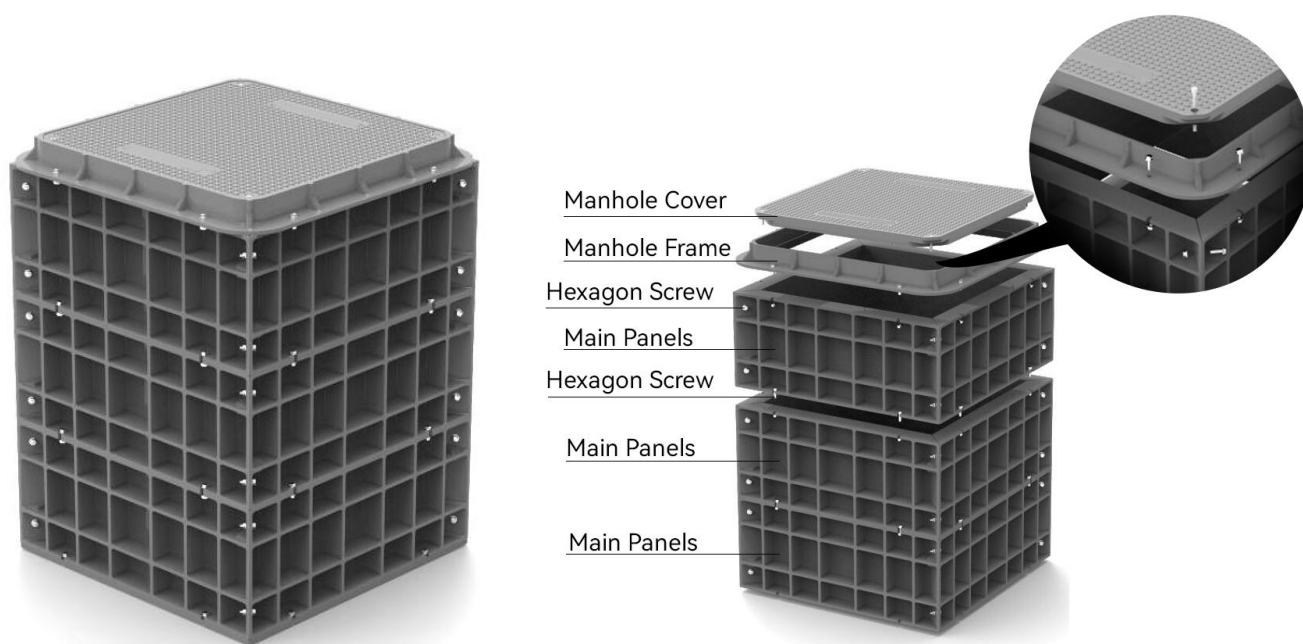

Product Component

- SMC material Panels.
- SMC material set of manhole cover.

Installation Tools And Consumables

Wrench, clean cloth, level, hole opener (according to the actual situation on site Equipped.)

Installation Procedure

- The SMC material baffle was assembled into a chamber shape.
- Use M10 x 45mm hex screws and nuts to fix the holes.
- Check whether the container needs to be opened. If you need to open holes, use a hole opener to open holes around the Chamber.
- Place the fixed chamber inside the dug foundation pit.
- After the chamber is placed, the gap in the foundation pit is filled with sand and fixed.
- Put a manhole cover over the chamber.
- Use a level to check the smoothness of the manhole cover and the ground slope. By tightening the hex screw, complete the adjustment.
- After the calibration work is completed, the surrounding sand is backfilled.